

TRACTION CONTROL SYSTEM INSTALLATION

15-029 TCS 2 SWITCH NON ADC

SVI, LLC 06DEC2017 REV2

PART #: 15-029 TCS 2 SWITCH NON ADC

DESCRIPTION: TRACTION CONTROL SYSTEM (TCS) WITH FRONT DRIVE AND REAR DIFLOC

FITS: MY13-17 RANGER 900 & 1000 ALL MODELS, MY18 RANGER 1000 CREW

MY15-18 RANGER 1000 DIESEL (KOHLER) ALL MODELS


EXCEPT MODELS WITH ADC (MY16 RANGERXP900 HUNTER DELUXE, MY17 RANGERXP1000 HUNTER)

KIT CONTENTS

- 1 38-013 HARNESS-TCS 2 SWITCH
- 2 10-151 ASM-SWITCH FRONT DRIVE
- 3 10-152 ASM-SWITCH REAR DIFLOC
- 4 97-022 DECAL-DASH REAR DIFLOC
- 5 7080138 8" LONG WEATHER RESISTANT BLACK CABLE TIE. QTY 3
- 6 OWNERS MANUAL SUPPLEMENT
- 7 INSTALLATION INSTRUCTIONS 15-029 (THESE INSTRUCTIONS)

INSTALLATION


1. Remove top dash. Use special plier in tool kit to remove push rivets. Examine TCS harness to make sure bullet is plugged into the gas or diesel socket per vehicle being installed on.
2. Unplug AWD connector and remove AWD switch. Insert wires from TCS harness into AWD connector. MATCH WIRE COLORS. Zip tie connector tight to harness. See photo.

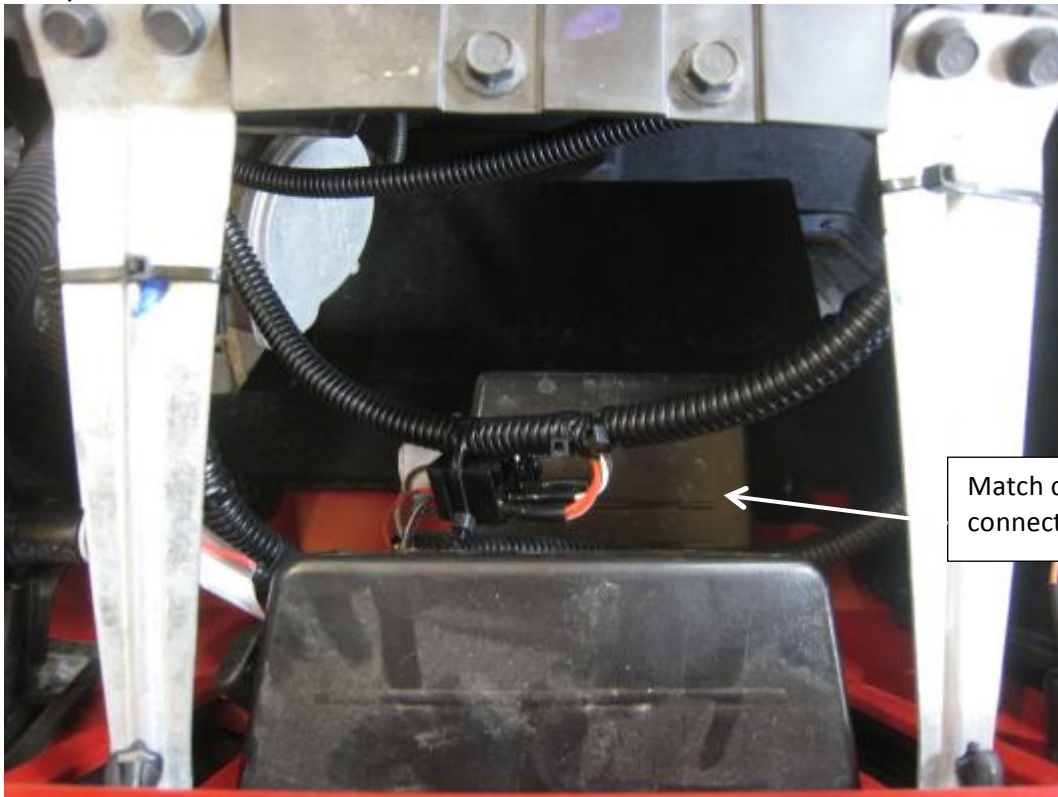

3. Push FRONT DRIVE and REAR DIFLOC switch harness connectors through square dash holes from back side. Cut holes if needed. See photo.
4. Plug FRONT DRIVE and REAR DIFLOC connectors into their respective switches. Push switches with connectors into the dash. See photo.



5. Feed harness from behind dash down to front drive connector. Unplug front drive and plug into TCS harness. Plug pigtail into vehicle harness where front drive was plugged in. See photo. Secure harness with cable tie(s) as needed.

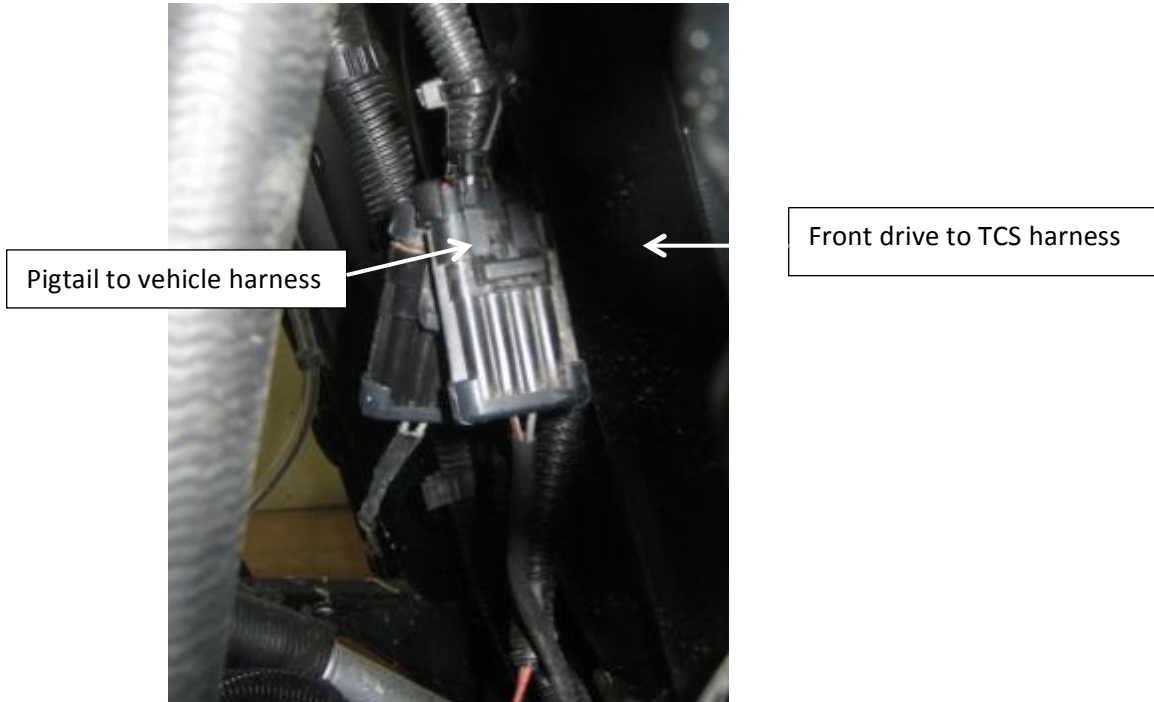

Decals

6. Apply decal per photo. Clean surface with alcohol. Smooth with decal squeegee.

